mophie.

powerstation[®] USB-C 3XL

Made for MacBook & Other USB Devices

USER MANUAL

Welcome

Thank you for purchasing the mophie[®] powerstation[®] USB-C 3XL portable battery. Developed with the latest USB-C PD technology, powerstation USB-C 3XL battery has the power and fast-charging capability to quickly add hours of power to your USB-C equipped laptop or other USB-C equipped device while you're on-the-go. Now you will be able to travel great distances and be the master of your own destiny, no longer bound by the limitations of your laptop's internal battery!

Package contains

- powerstation USB-C 3XL portable battery
- USB-C to USB-C cable
- USB-C to USB-A cable
- Quick-start guide

Features

Here's a rundown of why powerstation USB-C 3XL battery is so great:

- USB-C PD output can deliver up to 45W of power to your USB-C equipped laptop, tablet, smartphone or other compatible device.
- Additional USB-A output port can deliver up to 12W of power and is compatible with most USB devices and wearables.

- USB-C and USB-A ports are available simultaneously so you can charge two devices at the same time.
- powerstation USB-C 3XL battery recharges at fast speeds via the dedicated USB-C input port (up to 45W of power).
- Priority+^{*} charging provides power to a device connected to the USB-C port or the USB-A port before the powerstation USB-C 3XL battery starts to recharge from its USB-C input port.
- Track battery power at a glance with the integrated four-light LED status indicator. One touch tells you how much juice the powerstation USB-C 3XL battery has. Know before you go!
- mophie's smart adaptive charging technology identifies your connected device and always delivers the fastest, most efficient charging speeds available.
- Digital Power Management circuitry provides built-in short-circuit, overcharge, undercharge, and temperature protection. Safety first!
- The premium fabric wrap protects the housing from scratches and has a comfortable feel.

Compatibility

The mophie powerstation USB-C 3XL battery features a USB-C output port (USB-C PD) so you're always ready to charge your USB-C laptop or other USB-C equipped devices. The battery also has a USB-A output port that is compatible with most popular smartphones, tablets, other USB devices and wearables.


If you experience any issues with charging your particular device, ensure that the powerstation USB-C 3XL battery is fully charged and check the FAQ section on this website.

As always, no matter what device you have, carefully read through the *Warning* section in this manual and in the quick-start guide included with your powerstation USB-C 3XL battery before using it.

Charging your powerstation battery

IMPORTANT: Before using your powerstation USB-C 3XL battery for the first time, fully charge it (so that pressing the charge status button lights all 4 status LEDs).

To charge your powerstation USB-C 3XL battery, use one of the supplied cables to connect its USB-C input port to a USB-C or USB-A wall charger.

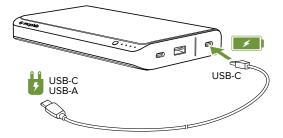


 The USB-C input port will charge the powerstation USB-C 3XL battery at USB-C PD spec power levels (up to 45W) when connected to a compatible wall charger.


Charging your device

Charging USB-C equipped laptops

Connect the supplied USB-C to USB-C cable to the powerstation USB-C 3XL battery's USB-C output port and to your laptop's USB-C charging input. Charging begins automatically.

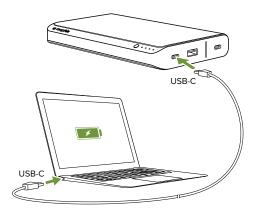


IMPORTANT: Do not connect a USB-C equipped laptop to the powerstation USB-C 3XL battery's USB-A port.

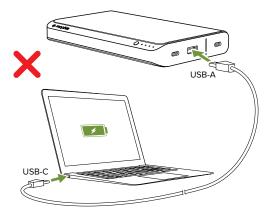


Charging other devices

Connect one of the included cables or the cable that came with your device to the powerstation USB-C 3XL battery's USB-C or USB-A output port and to your device. Charging begins automatically.

 The powerstation USB-C 3XL battery's USB-C output port will deliver USB-C PD power levels (up to 45W) when connected to a compatible device.

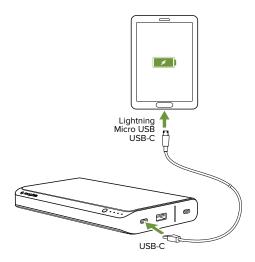


 The powerstation USB-C 3XL battery's USB-A output port will deliver power levels up to 12W when connected to a compatible device.

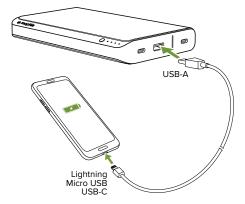

Charging multiple devices

You can use the powerstation USB-C 3XL battery's USB-C and USB-A output ports at the same time and charge two devices simultaneously. Connect the devices using the supplied cables and/or the cables included with the devices. Charging begins automatically.

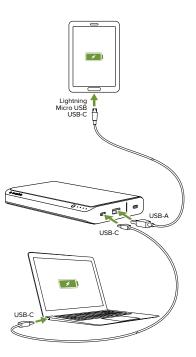


 When charging multiple devices, the powerstation USB-C 3XL battery's USB-C output port will deliver power levels up to 30W to a compatible device, and its USB-A output port will deliver power levels up to 12W to a compatible device.

IMPORTANT: Only connect a USB-C equipped laptop to the powerstation USB-C 3XL battery's USB-C output port. Do not connect it to the USB-A output port.


Priority+ Charging

When recharging your powerstation USB-C 3XL battery, Priority+ charging provides power to a device connected to either its USB-C or its USB-A output port first, before the powerstation battery starts to recharge.

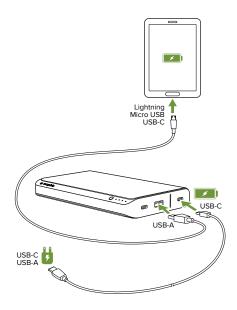

Checking your battery's charging status

Press the status button on your powerstation USB-C 3XL battery and the status LEDs will indicate its charge level. Four LEDs means that the battery is fully charged, while one LED means that it's almost empty. Know before you go!

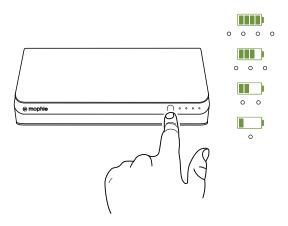

Taking care of your powerstation battery

- Keep your powerstation battery dry and away from moisture and corrosive materials.
- Do not clean your powerstation battery with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the powerstation battery's USB ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Recharge your powerstation battery once every three months when not in use. If you plan on putting it away, fully charge it (so that pressing the charge status button lights all 4 status LEDs) first.

Warranty

At mophie, we are dedicated to making the best quality products. To back this up, this product is warranted for 2 years. For full details regarding warranty terms and exclusions, please visit: <u>mophie.com/warranty</u>. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase. Be sure to register your product at <u>mophie.com</u>. Failure to register your product and/or provide proof of purchase may void the warranty.

Exclusions & Limitations

Except for the limited warranty expressly set forth or to the extent restricted or prohibited by applicable law, mophie expressly disclaims any and all other warranties express or implied, including any warranty of quality, merchantability, or fitness for a particular purpose, and you specifically agree that mophie shall not be liable for any special, incidental, indirect, punitive, or consequential damages of any type on any mophie product. In addition to and without limiting the generality of the foregoing disclaimers, the limited warranty does not, under any circumstances, cover the replacement or cost of any electronic device or personal property inside or outside of the mophie product.

You may have additional warranty rights depending on your country, state or province. Further, some countries, states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties, so the above may not apply to you. If any provision of the warranty is found unlawful, void or unenforceable, that provision shall be deemed severable and shall not affect any remaining provision.

Customer service

Telephone: 1-888-8mophie International: +1 (269) 743-1340 Web: <u>www.mophie.com/cs</u>

Warning

Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire, or explosion, for which damages you ("Purchaser"), and not mophie IIc ("Manufacturer") are responsible.

- Before using your powerstation USB-C 3XL battery for the first time, fully charge it (so that pressing the charge status button lights all 4 of the status LEDs).
- Do not store device in high-temperature environment, including heat caused by intense sunlight or other forms of heat. Do not place device in fire or other excessively hot environments.
- The powerstation USB-C 3XL battery should be operated only in open-air conditions. It should not be operated in an enclosed, unventilated space such as a carrying bag, pocket, purse or bedding. Failure to follow these instructions may cause damage to the battery by overheating.
- Be cautious of drops, bumps, abrasions, or other impacts to this device. If there is any damage

to the device such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use. Contact Manufacturer or dispose of it in an appropriate manner at your local battery-recycling center.

- Do not disassemble this device or attempt to re-purpose or modify it in any manner.
- Do not attempt to charge this device using any method, apparatus, or connection other than the device's USB-C input port. For questions or instructions for the ways to charge the device refer to the illustrations in the Charging Your powerstation Battery section of this user manual.
- Do not attempt to replace any part of this device.
- If this device is accessible to or may be used by a minor, purchasing adult agrees to be solely responsible for providing supervision, instruction, and warnings. Purchaser agrees to defend, indemnify, and hold Manufacturer harmless for any claims or damages arising from unintended use or misuse by a minor.
- All products have gone through a thorough quality assurance inspection. If you find that your device is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Manufacturer.

Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

Legal

This product is meant for use only in conjunction with the appropriate device. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer is not responsible for any damages to any device incurred through the use of this product.

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device or accessory other than the appropriate device for which this product is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this product as outlined above. Purchaser agrees to defend, indemnify, and hold Manufacturer harmless for any claims or damages arising from unintended use or misuse, including use with an unintended device. mophie, powerstation, Power for all, Priority+, Stay Powerful, the five-circles design, and the mophie logo are trademarks of mophie inc. Lightning and MacBook are trademarks of Apple Inc. USB-C is a trademark of USB Implementers Forum. All rights reserved. Patents: <u>mophie.com/patents</u>.

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION: Any changes or modifications of this device could void the warranty.

WEEE Declaration

All of our products are marked with the WEEE symbol; this indicates that this product must NOT be disposed of with other waste. Instead it is the user's responsibility to dispose of their waste electrical and electronic equipment by handing it over to an approved re-processor, or by returning it to mophie inc. for reprocessing. For more information about where you can send your waste equipment for recycling, please contact mophie inc. or one of your local distributors.

STAY POWERFUL®

CRE-0662-A