

Free Rein Wireless

Manual

Introduction

Free Rein Wireless earbuds sit comfortably and securely in your ears and give you easy access to your music and call controls.

Wireless Control

The simple, built-in controls on your Free Rein Wireless earbuds let you move freely throughout your day.

Button Functions:

Plus Button (Up button)


- Quick press Volume up
- Long press Track next song

Middle button (Center button)

- Quick press Play/Pause/
- Answer call/End call
- Medium press Voice control
 Long press Power on/ Power off/Deny call

Minus Button (Down button)

- Quick press Volume down
- Long press Track previous song

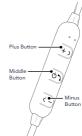

Power and Pair

Ensure your device's Bluetooth® connection is on.

- Press and hold the Power button for five seconds until the light flashes red and blue, indicating pairing mode. The next time you turn the earbuds on, you only need to press and hold the Power button for three seconds.
- On your device, select "IFROGZ Free Rein Wireless." Complete any additional pairing steps based on your device. The LED will flash blue every five seconds while your earbuds are on and paired.
- To turn your earbuds off, press and hold the Power button for three seconds. The LED will flash red until they are powered off.

/ Charge

To charge your earbuds, connect the micro USB end of the included charging cable to the port on the side of the wireless control and the USB end to your preferred USB outlet. The LED will light red while they are charging and will turn off when they are fully charged.

Free Rein Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1: This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

