

Resound Wireless

Manual

1 Introduction

Lightweight and stylish, the Resound Wireless earbuds keep your music and calls easily within reach. Here's how to get the most out of them.

2 Wireless Control

Your Resound Wireless earbuds feature a wireless control that houses all the music and call controls for easy access. When you're not using your earbuds, the magnetic storage clip makes cable management easy; simply wrap the earbud cables around the wireless control and secure them with the storage clip. Whether they're in your ears or in your pocket, the Resound Wireless earbuds are made to move. Below is a quick reference for how to use the wireless control:

Button Functions:

Raised bump button (Up button)


- Quick press - Volume up
- Long press - Track next song

Middle button (Center button)

- Quick press - Play/Pause/Answer call/End call
- Medium press - Voice control
- Long press - Power on/Power off/Deny call

Recessed groove button (Down button)

- Quick press - Volume down
- Long press - Track previous song

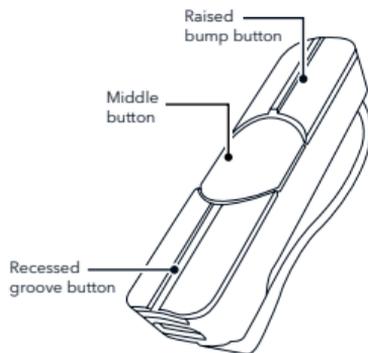

3 Power and Pair

Ensure your device's Bluetooth® connection is on.

1. Press and hold the Power button for five seconds until the light flashes red and blue, indicating pairing mode.
The next time you turn the earbuds on, you only need to press and hold the Power button for three seconds.
2. On your device, select "IFROGZ Resound Wireless." Complete any additional pairing steps based on your device. The LED will flash blue every five seconds while your earbuds are on and paired.
3. To turn your earbuds off, press and hold the Power button for three seconds. The LED will flash red when they are powered off.

4 Charge

To charge your earbuds, connect the micro USB end of the included charging cable to the port at the end of the wireless control and the USB end to your preferred USB outlet. The LED will light red while they are charging and will turn off when they are fully charged.

Resound Wireless Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1: This device may not cause harmful interference, and
- 2: This device must accept any interference received, including interference that may cause undesired operation.

NOTE: DO NOT EXPOSE THE PRODUCT TO WATER.



©2017 ZAGG Inc All Rights Reserved | NASDAQ: ZAGG | MADE IN CHINA

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ZAGG Inc is under license. Other trademarks and trade names are those of their respective owners.

IFROGZ and Resound Wireless are trademarks of ZAGG Inc.