


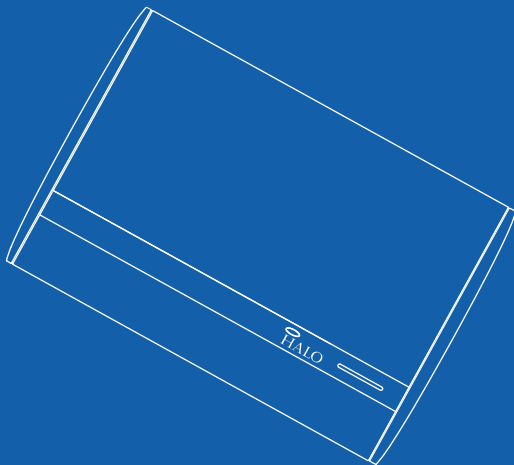

HALO[®]

POCKET POWER 8400[™]

Powerful Universal Portable Charger



OPERATING INSTRUCTIONS
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO POCKET POWER 8400

Thank you for choosing HALO. The Pocket Power 8400 has two built-in Standard USB output ports (one 5V/2A and one 5V/1A) and one Micro USB input port. Four LED lights indicate the charger's power level. Offered in a selection of hand wrapped faux leather colors, patterns and styles.


Please read the operating instructions carefully before using the HALO POCKET POWER 8400.

TABLE OF CONTENTS

Included Items	1
Operating Instructions	2-4
Maintenance and Care	5
Safety Precautions	5
Specifications	6
Warranty and Contact Information	7-8

INCLUDED ITEMS

- HALO Pocket Power 8400
- Standard USB to Micro USB Cable
- Carrying Pouch
- Operating Instructions

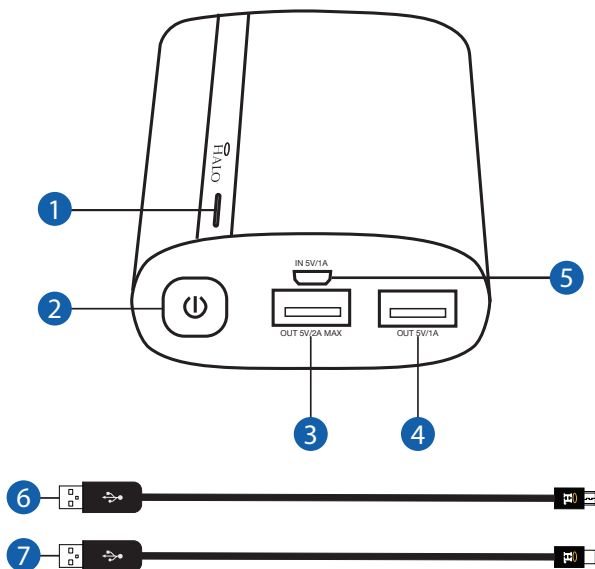

LOCATIONS OF CONTROL

- 1 | LED Battery Indicator Light
- 2 | Power ON/OFF Button
- 3 | USB Output Port 1
- 4 | USB Output Port 2
- 5 | USB Input Port
- 6 | Standard USB to Micro USB Cable
- 7 | USB C Cable

OPERATING INSTRUCTIONS

Prior to first use, it is recommended to fully charge the HALO POCKET POWER 8400.

Press the Power Button to display the power level on the HALO POCKET POWER 8400. The LED Battery Indicator will display four solid blue lights when fully charged.

TURNING YOUR HALO POCKET POWER 8400 ON/OFF

To turn on, press the power button, and the LED lights on the side of your HALO charger will illuminate. Press and hold the power button for three seconds to turn off. Your HALO charger is also equipped with an auto on/off feature. Your charger will automatically turn on and begin charging when an electronic device is plugged in and will automatically shut off after 30 seconds if not in use.

CHARGING THE POCKET POWER 8400

The HALO POCKET POWER 8400 operates on a rechargeable, Li-ion battery. First, use the Standard USB to Micro USB Cable (included) and connect the Micro USB tip into the Micro USB port on the HALO POCKET POWER 8400. Next, connect the Standard USB end into your computer's USB port or a USB adapter (not included).

While charging, the LED Battery Indicator will turn on and flash. When battery is fully charged, the LED Battery Indicator will stop flashing, disconnect the Standard USB to Micro USB Cable.

Note: The Micro USB Charging Port located on this unit is only used for charging the internal battery of the HALO POCKET POWER 8400.

CHARGING ELECTRONIC DEVICES

The HALO POCKET POWER 8400 comes equipped with Micro USB Cable, and USB C Cable.

To charge Android devices, plug the Micro USB tip of the provided cable into your electronic device. Next, plug the USB end of the Micro USB cable into the HALO POCKET POWER 8400 output port to begin charging.

To charge USB C compatible devices, plug the USB C tip of the provided cable into your electronic device. Next, plug the USB end of the USB C cable into the HALO POCKET POWER 8400 output port to begin charging.

NOTE:

If your electronic device does not have a Micro USB Input or a USB C Input, use the charging cable provided with your electronic device. To use, plug the Standard USB end of the cable into the USB Output located on your HALO POCKET POWER 8400.

CHARGING TWO ELECTRONIC DEVICES

You can simultaneously charge two devices by using both the 5V/1A Output port and the 5V/2A Output port on your HALO charger. You will need to use both the provided Standard USB to Micro USB cable and the cable that came with your personal electronic device to use both Output ports at the same time.

HALO SMART CHARGE TECHNOLOGY

Your HALO charger is programmed with HALO smart charge technology to achieve higher compatibility for charging different mobile phones. If it does not charge when connected to your mobile phone, please restart your HALO charger.

HALO POCKET POWER 8400 LEVEL INDICATORS

Indicator Lights	How to Read	Amount of Charge
● ○ ○ ○	One solid light	0%-25%
● ● ○ ○	Two solid lights	26%-50%
● ● ● ○	Three solid lights	51%-75%
● ● ● ●	Four solid lights	76%-100%

HALO POCKET POWER 8400 LEVEL INDICATORS: WHILE CHARGING

Indicator Lights	How to Read	Amount of Charge
⚡ ○ ○ ○	All four lights blinking	0%-25%
● ⚡ ○ ○	First light solid, other lights blinking	26%-50%
● ● ⚡ ○	First two lights solid, other lights blinking	51%-75%
● ● ● ⚡	First three lights solid, light blinking	76%-99%
● ● ● ●	All four lights solid	100% fully charged

MAINTENANCE AND CARE

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the battery is very low, it will rapidly flash to alert you to recharge the internal battery as soon as possible.

To maximize battery life: once the battery is fully discharged, immediately recharge (regardless of whether you plan to use this unit or not). If you do not plan to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least every two months to maintain the battery in optimum condition.

SAFETY PRECAUTIONS

This HALO POCKET POWER 8400 has been designed and manufactured to ensure your personal safety when used in the directed manner. Improper use can result in potential hazard.

Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference.

- The HALO POCKET POWER 8400 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- To reduce the risk of fire or electric shock, do not expose the HALO POCKET POWER 8400 to rain or moisture. Keep the HALO POCKET POWER 8400 away from dripping, splashing, or any objects filled with liquids. Do not place anything on HALO POCKET POWER 8400.
- Keep away from heat sources, including but not limited to: open flame sources, radiators, stoves, ovens, cars, and amplifiers that produce heat.

- Do not expose HALO POCKET POWER 8400 or batteries to fire or sunshine.
- Do not puncture, crush or subject to mechanical shock.
- Do not disassemble.
- Unplug the charger when batteries are fully charged or not in use.
- Li-ion batteries must be recycled. Do not dispose of in the trash.

SPECIFICATIONS

Battery Capacity: 8400mAh

Micro USB Input Charging: 5V \Rightarrow 1.0A

USB Output 1: 5V \Rightarrow 1.0A

USB Output 2: 5V \Rightarrow 2.0A

Dimensions : 3.86 inches x 2.79 inches x .98 inches

Weight: 133 g

Working Temperature: 0°C to 45°C

Working Humidity: Max 85%

COMPLIANCE WITH FCC REGULATIONS

“This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

“Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY

HALO International SEZC LTD warrants its products to be free from defects in material and workmanship under normal use. Conditions are as follows:

- During the first 90 days from date of purchase, HALO International SEZC LTD will repair or replace the defective product.
- HALO International SEZC LTD will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid. We do not offer shipping rebates at this time.
- Warranty is void if the product has been improperly handled or misused in any way, or if the label and/or bar-coded warranty label has been removed or tampered with.
- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used or which incorporates with any of our products and accessories. HALO International SEZC LTD shall not be held responsible for the improper use of its products.
- For all questions or exchange requests, please call 888-907-6274, or email us at support@BestHALO.com



FOR TECHNICAL SUPPORT PLEASE
EMAIL US AT:

SUPPORT@BESTHALO.COM
OR
CALL US AT: **888-907-6274**

HALO INTERNATIONAL SEZC LTD
90 NORTH CHURCH STREET,
GEORGE TOWN, GRAND CAYMAN

WWW.BESTHALO.COM