



powerstation pro

Made for MacBook & Other USB Devices

USER MANUAL

Welcome

Thank you for purchasing the mophie **powerstation pro** universal battery. Your **powerstation pro** battery is a compact yet powerful mobile charging solution for any USB-C equipped laptop, as well as other USB devices, including tablets and smartphones. Now you will be able to travel great distances and be the master of your own destiny, no longer bound by the limitations of your device's internal battery!

Package contains

- **powerstation pro** universal battery
- USB-C to USB-C cable
- USB-C to USB-A cable
- Quick-start guide

Features

Here's a rundown of why your **powerstation pro** battery is so great:

- High-density, high-output universal battery charges USB-C devices at super-fast speeds — up to 30W — via the USB-C port.
- Additional USB-A output port (2.4A max charging speed) is compatible with most USB devices, letting you charge your laptop and another device at the same time.

- Priority+ pass-through charging provides power to a charging device before the **powerstation pro** battery starts to recharge.
- Track battery power at a glance with the integrated four-light LED status indicator. You can keep tabs on charging status and current battery life. Know before you go!
- Rechargeable for over 500 full cycles. Our battery is built to last so you can do more, longer.
- mophie's smart adaptive charging technology identifies your connected device and always delivers the fastest, most efficient charging speeds available.
- Digital Power Management circuitry provides built-in short-circuit, overcharge and temperature protection. Safety First!

Compatibility

The mophie **powerstation pro** battery has been designed to work with USB-C equipped laptops as well as most popular tablets, smartphones and other USB devices.

- If you experience any issues with charging your particular device, ensure that the **powerstation pro** battery is fully charged and check the FAQ section on this website.

As always, no matter what device you have, carefully read through the Warning section in this manual


and in the quick-start guide included with your **powerstation pro** battery before using it.

Charging your device using your *powerstation pro* battery


IMPORTANT: Before using your **powerstation pro** battery for the first time, fully charge it (so that pressing the charge status button lights all 4 status LEDs).

Charging USB-C equipped laptops:

Connect the supplied USB-C to USB-C cable to the **powerstation pro** battery's USB-C output port and to your device. Charging begins automatically. (While charging a laptop, the **powerstation** battery's status LEDs will blink towards the right.)

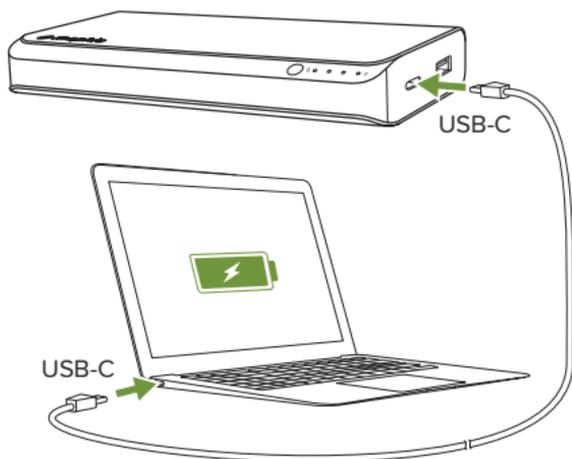


IMPORTANT: Do not connect a USB-C equipped laptop to the **powerstation pro** battery's USB-A port.

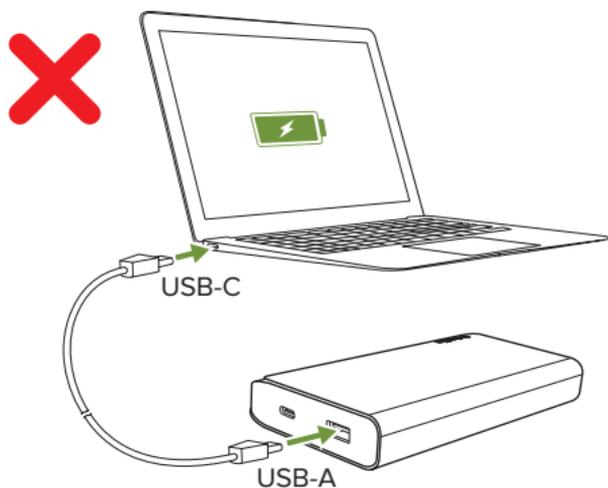

Charging devices other than laptops:


Connect the cable that came with your non-laptop device to the **powerstation pro** battery's USB-C port or USB-A port and to your device. Charging begins automatically. (While charging other devices, the **powerstation pro** battery's status LEDs will blink towards the right.)

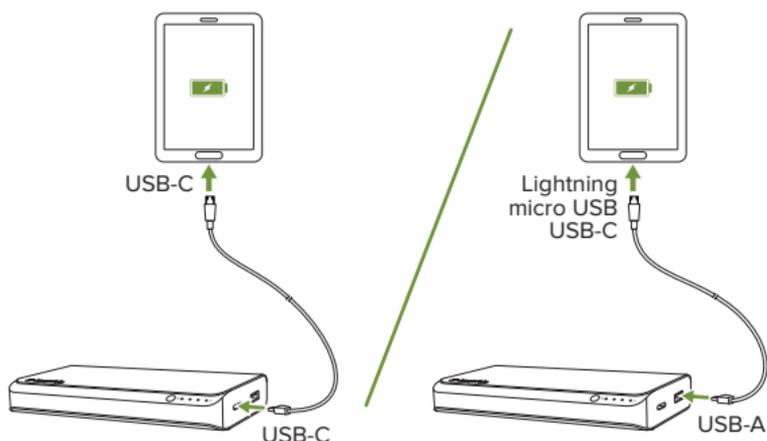

IMPORTANT: Do not connect a USB-C equipped laptop to the **powerstation pro** battery's USB-A port.

Charging multiple devices:


You can use the **powerstation pro** battery's USB-C and USB-A output ports at the same time and charge two devices. Connect the devices using the supplied cables and/or the cables included with your devices. Charging begins immediately. (While charging other devices, the **powerstation pro** battery's status LEDs will blink towards the right.)

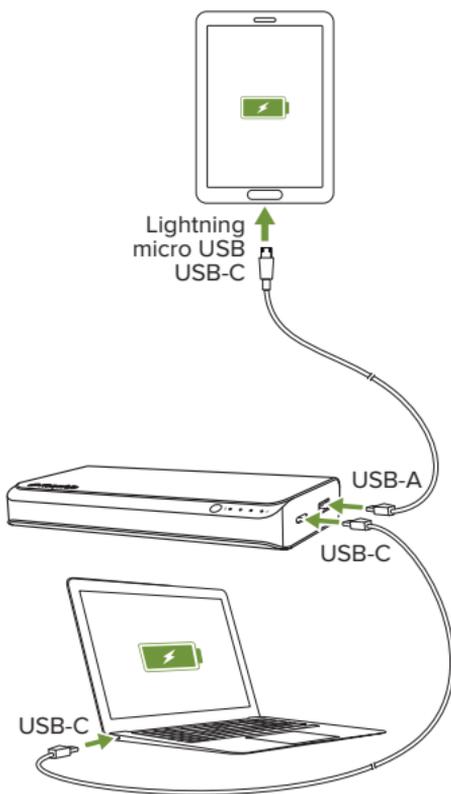

IMPORTANT: Only connect a USB-C equipped laptop to the **powerstation pro** battery's USB-C port. Do not connect it to the USB-A port.


Charging your *powerstation pro* battery

To charge your **powerstation pro** battery, use either of the the supplied cables to connect its USB-C port to the wall charger included with your USB-C equipped laptop, to a USB-C car charger, or to a 2.4A USB-A wall charger. (While charging the **powerstation** battery, the status LEDs will blink towards the left.)

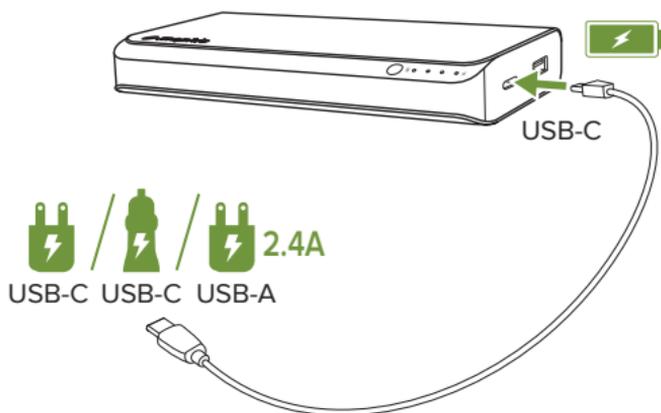

Priority+ Pass-Thru Charging:


When you're recharging your **powerstation pro** battery, Priority+ pass-through charging provides power to devices connected to the USB-A output port first, before the **powerstation** battery starts to recharge. (While charging the **powerstation** battery, the status LEDs will blink towards the left.)

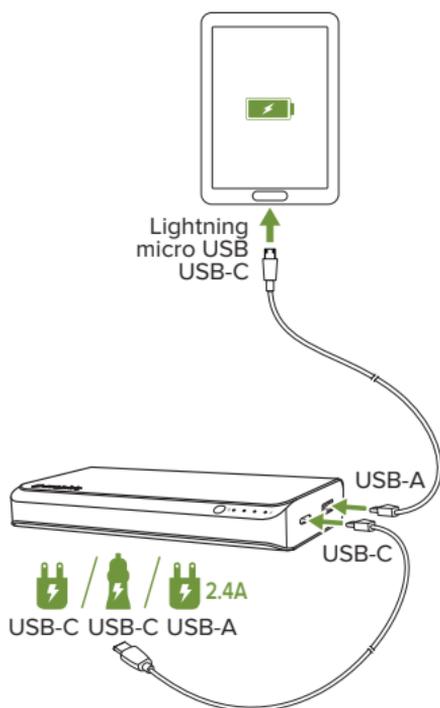

IMPORTANT: Do not connect a USB-C equipped laptop to the **powerstation** battery's USB-A port.

Charging While Connected to a Laptop:

You can recharge the **powerstation pro** battery while it's connected to a USB-C laptop that is also connected to its wall charger. After connecting the **powerstation** battery and laptop as shown in the illustration below, press and hold the **powerstation** battery's status button for 2 seconds to begin charging the **powerstation** battery. (While charging the **powerstation** battery, the status LEDs will blink towards the left.)

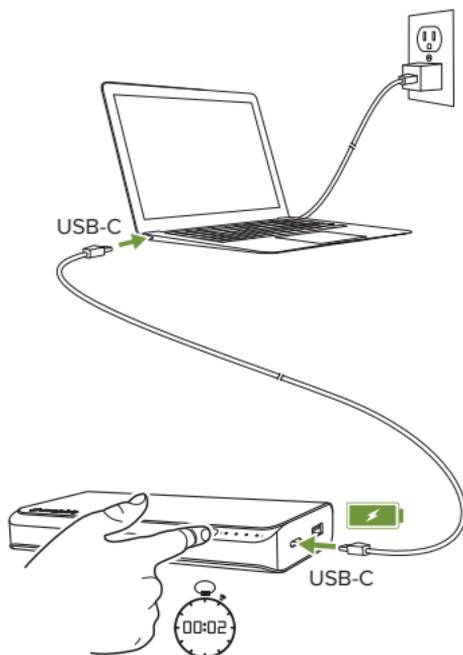


NOTE: With the **powerstation pro** battery connected as shown above, if you do not

press-and-hold the status button the **powerstation** battery will not charge in (recharge) and will not charge out.

Checking your *powerstation pro* battery's charging status

Press the status button on your **powerstation pro** battery and the status LEDs will indicate its charge level. Four LEDs means that the battery is fully charged, while one LED means that it's almost empty. Know before you go!

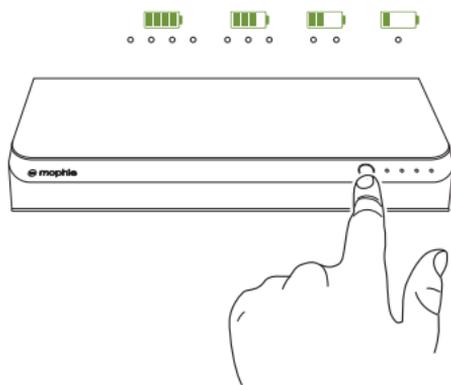

Taking care of your *powerstation pro* portable battery

- Keep your **powerstation** battery dry and away from moisture and corrosive materials.
- Do not clean your **powerstation** battery with harsh chemicals, soaps or detergents. Just wipe the case with a soft, water-dampened cloth.

- Make sure the **powerstation** battery's USB ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- If you plan on putting your **powerstation** battery away, fully charge it (so that pressing the charge status button lights all 4 status LEDs) first.

Warranty

At mophie, we are dedicated to making the best quality products. To back this up, this product is warranted for 2 years from date of purchase. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase. Be sure to register your product at mophie.com. Failure to register your product and/or provide proof of purchase may void the warranty.

Exclusions & Limitations

Except for the limited warranty expressly set forth or to the extent restricted or prohibited by applicable law, mophie expressly disclaims any and all other warranties express or implied, including any warranty of quality, merchantability, or fitness for a particular purpose, and you specifically agree that mophie shall not be liable for any special, incidental, indirect, punitive, or consequential damages for breach of

any warranty of any type on any mophie product. In addition to and without limiting the generality of the foregoing disclaimers, the limited warranty does not, under any circumstances, cover the replacement or cost of any electronic device or personal property inside or outside of the mophie product.

Customer service

Telephone: 1-888-8mophie

International: +1 (269) 743-1340

Web: www.mophie.com/cs

Warning

Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you (“Purchaser”), and not mophie llc (“Manufacturer”) are responsible.

- ⓧ Before using your **powerstation pro** battery for the first time, fully charge it (so that pressing the charge status button lights all 4 status LEDs).
- ⓧ Do not store device in high-temperature environment, including heat caused by intense sunlight or other forms of heat. Do not place device in fire or other excessively hot environments.
- ⓧ Be cautious of drops, bumps, abrasions, or other

impacts to this device. If there is any damage to the device such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use. Contact Manufacturer or dispose of it in an appropriate manner at your local battery-recycling center.

- X-8 The **powerstation pro** battery should be operated only in open-air conditions. It should not be operated in an enclosed, unventilated space such as a carrying bag, pocket or purse. Failure to follow these instructions may cause damage to the battery by overheating.
- X-8 Do not disassemble this device or attempt to re-purpose or modify it in any manner.
- X-8 Do not attempt to charge this device using any method, apparatus, or connection other than the device's USB-C input connector. For questions or instructions for the various ways to charge the device refer to the *Recharging your **powerstation pro** Battery* section of this user manual.
- X-8 Do not attempt to replace any part of this device.
- X-8 If this device is intended by Purchaser to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.
- X-8 All products have gone through a thorough

quality assurance inspection. If you find that your device is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Manufacturer.

- ☠ Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

Legal

This product is meant for use only in conjunction with the appropriate device. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer is not responsible for any damages to any device incurred through the use of this product. Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device or accessory other than the appropriate device for which this product is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this product as outlined above. If you are responsible for product use with an

unintended device and damages result from such use, you agree to indemnify Manufacturer for any resulting injuries to you or any third part(ies).

mophie, powerstation, Power for all, Priority+, Stay Powerful, the five-circles design, and the mophie logo are trademarks of mophie inc. Lightning is a trademark of Apple Inc. Patents: mophie.com/patents.

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION: Any changes or modifications of this device could void the warranty.

This device CONFORMS TO UL STD 60950-1
CERTIFIED TO CSA STD NO. 60959-1, CONFORMS TO
UL STD. 2054.

 STAY POWERFUL™